



- Start the screws automatic closing.
- Stop the automatic screws opening or closing phase.

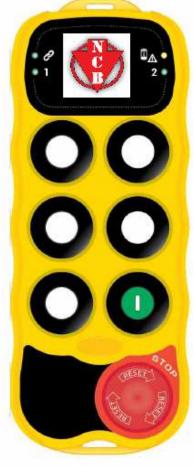

Drive panel

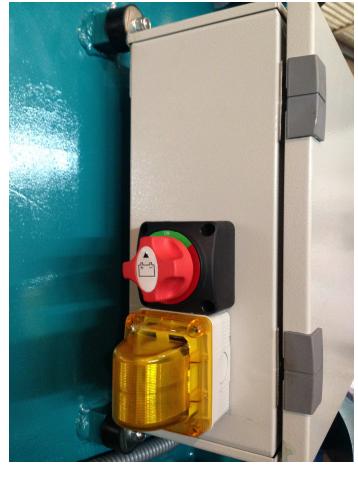





Drive panel

- Light green = screws open
- Light red = screws closed

Battery panel

Light lightening = low battery